



Stiffy Snap Trapeze

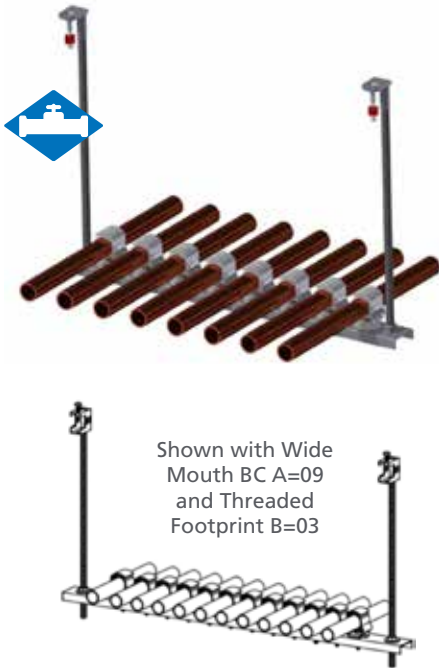

Shown with Wide Mouth BC A=09 and Threaded Footprint B=03

- Supports A/C Tubing, Refrigeration, PEX, Med Gas, Copper and Steel Pipe, EMT, MC/AC and Flexible Conduit
- Engineered as a complete assembly
- No time wasted in the field with unnecessary assembly
- Quick installation
- Refer to project building code for support spacing and seismic requirements
- UL Listed Components
- Snaps can be installed around insulated pipes or spacers can be supplied so insulation can be notched around the support
- Larger Sized Snaps are available to be installed around insulation

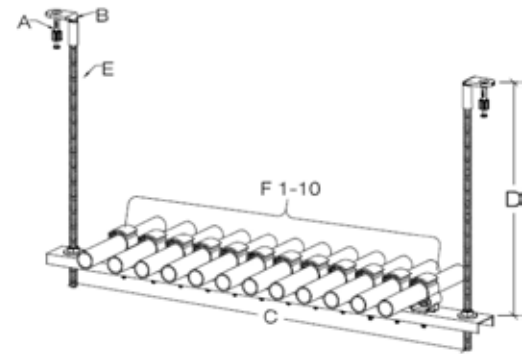

Shown with PowderPuff Pin A=13 and New Hard Concrete Footprint B=01

Max Capacity Based on Span	
24" Span	100#
36" Span	80#

Contractor:	Ship to Address:
PO#	Order Date:
**All Orders are Custom and Therefore Non-cancellable and Non-returnable	



	A	B	C	D	E	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	Qty
Fig 131																
Fig 131																
Fig 131																

A		B		C	D	E		F1 Thru F10								
*00	No Fastener	*01	*011	Width (Inches)	Drop Length (Inches)	*01	1/4" ATR	Input the appropriate value preceded by an (*)								
*01	1-1/4" Power Actuated Pin—1" Embedment (B = 011) ²					*02	3/8" ATR ¹	Trade Size	EMT ³	Sch 40 Steel ^{4,5}	Type K Copper ^{4,5}					
*02	1-1/2" Power Actuated Pin—1-1/4" Embed (B = 011) ²	90° Footprint	Hard Concrete Footprint	To add insulation spacers: Add an "1" to the order option followed by the insulation thickness. Example: *2812 = 1" copper with 2" of insulation.				Size	Wt/LF	Size	Wt/LF	Size	Wt/LF			
*03	1/4" x 3-1/4" Wedge Anchor (2" Embed)							*012	*02	1/4"	-	*10	-	*10	-	
*03.1	3/8" x 3" Wedge Anchor (2" Embed)							3/8"	-	*17	-	*17	-			
*04	1/4" x 1-3/4" Concrete Screw Anchor							1/2"	*17	0.54	*20	0.98	*15	0.43		
*04.1	3/8" x 1-3/4" Concrete Screw Anchor	Gas Tool Footprint	Sidemount Footprint					5/8"	-	-	-	*17	-			
*06	#10 Hex Washer Head Self Driller							3/4"	*22	0.92	*25	1.36	*22	0.83		
*07	#10 Hex Washer Head Sharp Point	Gas Tool Footprint	Sidemount Footprint					1"	*28	1.38	*32	2.07	*28	1.18		
*08	Timberpin (Wood Applications)							1-1/4"	*36	-	*40	-	*32	-		
*09	Wide Mouth Beam Clamp	Thimberpin Footprint	Other Footprint					1-1/2"	*40	3.36	*47	3.58	*40	2.1		
*12	Adjustable Hammer-on BC Rotates 360° (Specify Flange Thickness)							2"	*51	4.78	*59	5.05	*51	3.37		
*13	1-1/4" PowderPuff Pin—1" Embedment (B = 011) ²	Threaded End (1/2" of Threads)	*10 Other Please Specify	Footnotes:												
*14	Stiffy Wood Pull Down Attachment			1—In order to transition to 3/8" ATR a reducing coupler is used for B=01 and 02 Footprints. New Hard Concrete Footprint B=011, is available in 1/4" and 3/8". 2—When Power Actuated Fasteners (A=01, 02 or 13) and (B=01-90° Footprint) are selected the B=011 New Hard Concrete Footprint will be used by default. 3—EMT weights are calculated with 40% conductor fill. 4—Sch 40 Steel and Copper weights are calculated as full of water. 5—Larger Sized Snaps are available to be installed around insulation.												
*16	Hammer-on Beam Clamp 1/8" - 3/4" Flange															
*17	Bar Joist Pull Down Clamp 1/16" - 1/4 Flange															
*25	Other—Please Specify															

Additional Fastener Options are Shown on Pages 19-21

Application Examples



CONSTRUCTION ENGINEERED ATTACHMENT SOLUTIONS

It's What We Do!